



TurningPoint Student Clicker Guide

Note: Some TurningPoint XR clickers are white and orange and others are blue and gray. Color does not affect function.

TurningPoint Student Device Registration

To register a TurningPoint clicker device in an eLearning course, follow the steps below.

1. Open the eLearning course and click on the TurningPoint Clicker Registration icon.
2. Locate the **Device ID** on the back side of your clicker. This number appears below the barcode on the clicker.
3. Enter the **Device ID** in the **Response Device ID** field and **Confirm Response Device ID** field in your eLearning course. **Note that all 0's in the Device ID are zeros and all 1's are number ones.**

Response Device ID:


Confirm Response Device ID:



4. Click the **Submit** button.

Student Instructions for Changing TurninPoint Clicker Channels

1. Press the **Menu** button on the clicker to turn it on.
2. At the "Leave Presentation Mode?" prompt, press the **Yes** button.
3. Press the **Yes/Down** arrow key to select *Change Channel* and press the **Enter** key located above and to the left of the **1/A** key.
4. When the *Current Channel – New Channel #?* Screen appears, press the desired channel on the keypad.
5. Press the **Enter** key located above and to the left of the **1/A** key.
6. When the clicker has successfully located the receiver it will display, "Channel Changed. Receiver Found". The clicker is now ready to communicate with the classroom receiver.

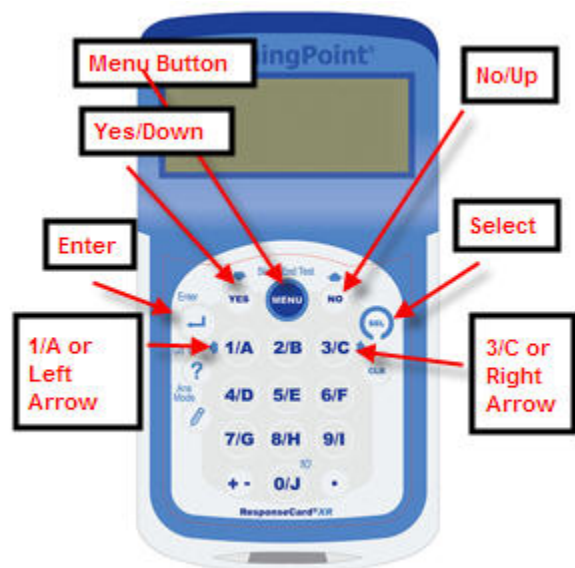

Using the Turning Technologies Clicker in Class

How do I turn on my clicker?

Your clicker will turn on automatically when you enter your response to your instructor's question. When sending a response to a question, it is not necessary to press a separate button to turn the clicker on. If the device is asleep (display is blank), simply press the button that correlates with your response. This will both turn the device on and send the response.

Why does my clicker screen show “Leave Presentation Mode? (Y/N)”?

If you press the **Menu** button, the clicker will display “Leave Presentation Mode? (Y/N)”



- You must be in Presentation Mode to send your responses to the system. If you pressed the **Menu** button by mistake when you were attempting to respond to a question, when asked if you want to “Leave Presentation Mode”, press the **No** button on the clicker. This will return you to Presentation Mode. You can then simply press the button corresponding to the answer you wish to send.
- If you wish to change channels or access some of the other options on the clicker menu, when asked if you want to “Leave Presentation Mode”, press the **Yes** button on the clicker. You can then scroll through the menu choices by using the **Yes (Down)** and **No (Up)** buttons. When you have highlighted the desired menu option, click the **Enter** button above and to the left of the 1/A button to select it.

How do I know my response was submitted?

To see if your response was submitted, look for the checkmark on the clicker display. If your response was received by the system, your display will show the response you sent along with a checkmark which appears to the right side of the display. The presence of the checkmark on your clicker display verifies that the system has received your response. If your response was not accepted by the system, an error message will appear on your clicker display, such as “Not Accepting Answers”, which means that polling has now closed and is no longer accepting answers.

